



2515 Bypass Rd. Flemingsburg, KY 41041
606-845-7439

Instructions for Installation and Care of Honda Pioneer 500
Full Cab fits Aero-Vent Windshield
HO-P500-FC05

CAUTION: Do not smoke inside the cab or expose the enclosure to direct flames. Product is FLAMMABLE.

Be sure to read these instructions thoroughly before opening and installing the enclosure. The installation is best done when ambient temperature is 70°F or warmer. If installed in cold weather, warming the adhesive Velcro strips before installation is recommended.

1. This cab enclosure is made up of 4 different panels that all come together to fully enclose the sides and rear of the vehicle. You may put on different pieces or leave other pieces off to create the enclosure that best meets your needs.
2. Check over the parts included in the carton with the parts list shown below:



2" Adhesive Velcro hook strips	16 each	3" long
2" Adhesive Velcro hook strips	4 each	6" long
2" Adhesive Velcro hook strips	2 each	9" long
2" Adhesive Velcro hook strips	2 each	34" long
2" Adhesive Velcro hook strips	1 each	38" long
Webbing Straps w/Loop	2 each	
Webbing Straps w/ Grommets	2 each	
Webbing Straps w/ Velcro	2 each	
Screw snaps	13 each (1 extra)	
Cab enclosure	4 Pieces	

If any parts are damaged or missing please contact customer service at (606) 845-7439.

3. For these instructions we will be installing the entire enclosure. This will cover every piece so if you should want to install just parts of the enclosure these instructions should be sufficient. The order of installation will be as follows:
 - a. Side Door Panels
 - b. Rear Window
 - c. Top

Door Panels:

4. Begin installation by hanging the Door Panels from the top by using the 3" adhesive Velcro strips as shown in the photos below:

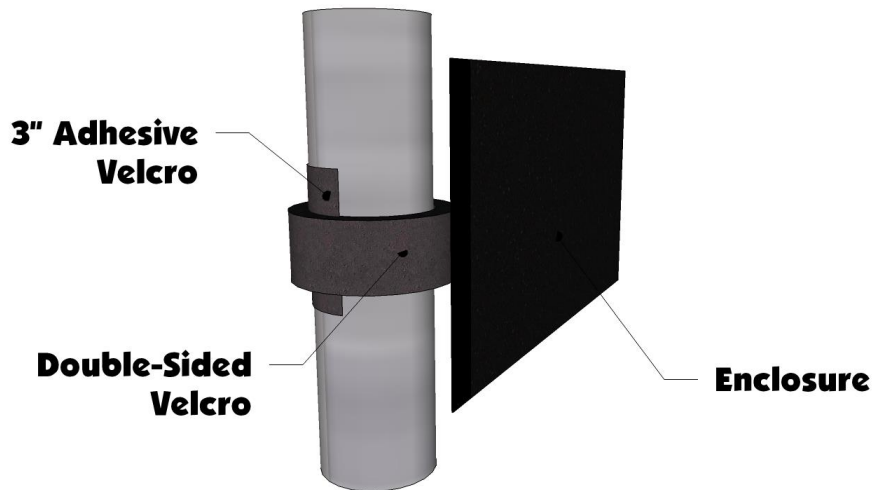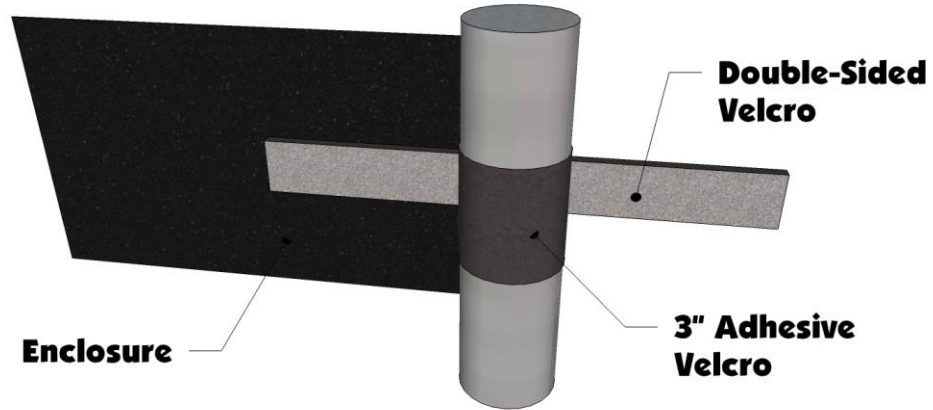

5. Begin installation of the Door Panels by hanging them from the Double-Sided Strips along the top of the doors. Hold the door up and mark where the each strip is and wrap a 3" adhesive strip around the roll cage. Now hang the door up and it will be in place to install the rest of the Velcro for the door. See Photo Below:



6. Now move around the door and attach the remaining Velcro strips in the same manner. Down the front of the door place the edge of the door against the side of the windshield and run the Velcro strips under it with the 3" adhesive Velcro on the inside of the roll cage.



7. The rear of the door panel has 4 double-sided Velcro tabs that attach to the rear bar. For these you will take the two 6", 9", 10", and 15" adhesive Velcro strips and attach them down the rear bars facing the rear of the vehicle. Then attach the tabs to the bar as shown in the photo below.



8. Once the upper portion of the doors are in place it's time to place the snaps around the bottom portion of the doors.
9. Next take the front of the door and tuck it inside the vehicle. There are three snaps that will go on the inner panel. NOTE: it helps to place the screw snaps into the sockets on the cabs first, then starting at the top one, push them into the plastic so a small dimple is left behind. Then pull the screw snap back out and screw it into the plastic where the mark was made. See photo below



10. Next do the same for the three snaps along the bottom rear corner of the door as shown in the photo below.



Rear Window:

11. Begin installation of the Rear Window by hanging it from the top bar first. Take the 38" adhesive Velcro strip and attach it to the top bar facing towards the front of the vehicle. The photo below shows where to install the Velcro.



12. The sides of the Rear Panel will attach to the outside of the double-sided tabs that hold the rear of the door panels as shown below.

13. The bottom of the Rear Window is held in place by magnets

Top Cap:


14. To install the Top you first need to attach four straps to you vehicle that will hold the top on. The two in the front of the vehicle attach to the bottom windshield clamp as shown in the photo below.



15. The rear straps will attach to the rear rack of the Pioneer. Put the looped end of the strap around the bar and run the other end of the strap through the loop. The photo below shows how this should look.



16. Next take the top and place it on the vehicle and run the straps through the buckles sewn to the corners. The photo below shows how this is done.

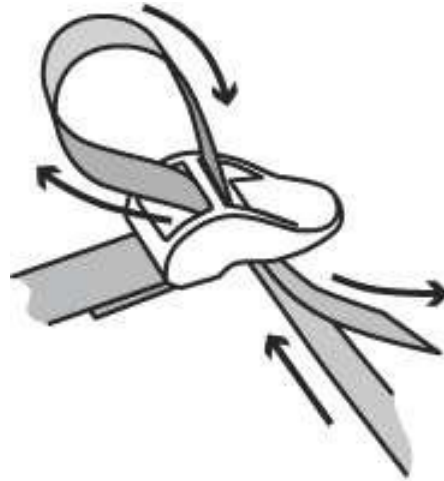

17. Then pull all the straps down tight making sure the top is centered.

Cleaning and Storage Recommendations:

1. Before removing the Cab for storage, make sure it is very clean in order to prevent scratching of the window panels. Clean with a soft rag or sponge using a mild liquid detergent soap and warm water solution. Never rub the windows with a dry cloth or rag! Let the Cab dry thoroughly before attempting to roll for storage.
2. It is important that the Cab be rolled up for storage rather than folding. Folding will cause damage to the windows!!! Carefully roll up the Cab similar to the way it was when it was packed at the factory. On a large, clean and flat surface, fold the doors over the rear panel first, then, interleave the top and windshield on top of the doors. Begin rolling the Cab into a roll approximately 8 inches in diameter. Put the rolled Cab back into the carton for storage at a normal room temperature. It is best not to expose the Cab to either extreme hot or cold temperatures when storing.
3. A special cleaner conditioner is available from Falcon Ridge that will greatly increase the service life of the Cab Enclosure. In addition, if additional hook and loop sets are needed, they can also be ordered.

Thank you for your purchase!

Return Policy

If for any reason you choose to return this product it must be returned within **30 days from date item is received**. You **MUST** package the product exactly **as it was originally packaged from the factory to get a full refund for the product!**

The vinyl windows should never be folded when packaging in the box or for storage purposes. Lay all the windows on top of each other with the canvas folded in between and the paper (if available) on both sides of the windows.

All returned products will be inspected upon arrival at the production facility and must be in unused, factory new condition to receive refund - a 25% restocking fee will apply.

If ordered from Falcon Ridge please call at 606-845-7439 to gain a return authorization number, use our preferred shipping carrier (UPS) to return the item (unless the item is defective, you are responsible for paying the shipping to return the item.) **Any returns submitted to Falcon Ridge without a return authorization number will be charged a 20% restocking fee.** If ordered from one of Falcon Ridge's many distributors, you must first call them and see what their return policy is. Once your item reaches our production facility, our customer satisfaction team will inspect your item to ensure unused, factory new condition. **NOTE: All windshields must be returned with the original protective film intact and not removed. Do NOT REMOVE if you have any intentions of returning the item. Refund/ replacement of a windshield will only be processed on items with original protective film or if the windshield is defective.**

Items must be properly packaged in the original shipping carton to protect them during transit and ensure your returned item arrives back factory fresh, and in new resalable condition (**any returned items that have been used, altered or damaged in any way will not be subject for a refund.**) All contents including instruction manuals, accessories, hardware, Velcro, etc. must be included in your return shipment. Only items in OEM factory new condition will be approved. Once returned items are received, credit will be issued to the original credit card/ payment method used for the purchase. Outbound shipping and return shipping cost will not be refunded. Please allow 4 to 6 weeks for your refund to be processed.

Warranty

To The Owner of this Product:

Thank you for purchasing one of our Falcon Ridge Cab Enclosures, Tops &/or Windshields! Below are the terms under which your product is covered under our manufacturer's warranty.

30 Day Warranty which includes and is not limited to replacing the enclosure, tops and/or windshield due to defect of the product. Please refer to the return policy in this case for more information.

1 Year Warranty includes any defect in material or workmanship within this time frame we will gladly correct the problem or replace the enclosure, tops &/or windshield. Upon submitting for the correction or replacement we will need to receive pictures of the defect in material or workmanship along with the receipt from the date of purchase.